

MOR!





BCAM™, find hidden defects in buildings fast

Locate it fast – avoid problems


See badly insulated areas which result in energy losses. Supervise and check the quality of new constructions. Locate hidden pipes and avoid damage. Identify air leaks. Detect leaks and minimize repair costs. Find areas susceptible to, sometimes dangerous, mold build-up. Discover leaks in flat roofs. Use the BCAM to detect the problem and repair it.

See temperatures

The BCAM allows you to measure the temperature of any object you are looking at in a non-contact mode. A crosshair in the middle of the thermal image allows you to measure and analyze the temperature at a single point. You're also able to highlight the entire faulty area with a colour alarm. Detect the most diverse building problems instantaneously by seeing them on a thermal image.

Document your work

BCAM stores 1,000 images in standard JPEG format. Insert your images directly in to e-mail, Word® or PowerPoint®. The images are also compatible with all of FLIR's more advanced software. This enables you to use all images, cameras and software together.

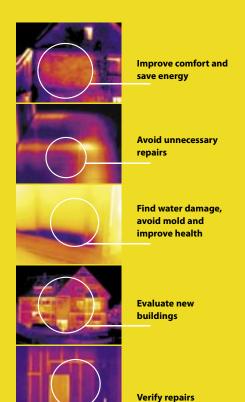



Easy-to-use

BCAM is lightweight and ergonomically designed for indoor and outdoor use. The camera with the one-hand grip is intuitive to operate. You simply point, shoot and capture your IR images.



Image Quality

Now with improved sensitivity (0.1 NETD). See smaller temperature differences and get sharper images on the large LCD and in the reports.




Image storage

Now with SD card that stores up to 1,000 infrared images. Move standard JPEG images to a computer without cables.



QuickReport software

Powerful, easy-to-use software for downloading images, making analysis and reports.



Find insulation defects

Now even easier to use with the insulation alarm. You can easily detect areas that don't fulfill the insulation requirements.



Find and prevent moisture damage

The Dew Point Alarm displays areas with risk of surface condensation and mold growth before damage occurs

Technical specifications

Imaging performance Minimum focus distance Detector type

Focal Plane Array (FPA), uncooled microbolometer, 120 x 120 pixels

Image presentation 3.5" color LCD, 16K colors Display

Measurement -10°C to +100°C Temperature range ±2°C, ±2% of reading Accuracy Thermal sensitivity / NETD 0.10°C at 25°C

Spot in the middle, colour alarm above / below, insulation alarm, dew point alarm Palettes (color or black and white), auto-adjust (automatic/manual) Measurement mode Menu controls

Date/time, language, power down, display intensity

Set-up controls Measurement corrections Emissivity variable from 0.1 to 1.0

Image storage

1,000 images. Removable SD Card (128 Mbyte included) Type File formats

Standard radiometric JPEG

Laser locatIR Classification

Type Semiconductor AlGalnP Diode Laser:1mW/635 nm red

Battery system

Operating time 7 hours continuous operation. Display shows battery status Charging system

In camera, AC adapter AC adapter 90-260 V AC, 50/60 Hz

AC operation Input voltage

Environmental specification

Operating temperature range -15°C to +50°C Encapsulation IP54

Physical characteristics

Size (L x W x H)

243 mm x 81 mm x 103 mm

Interfaces

Image transfer to PC

IR camera, Carrying case, Power supply, Hand strap, USB cable, User manual, Power cord, Battery, 128 Mbyte SD Card, QuickReport software **BCAM** includes:

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

©Copyright 2007, FLIR Systems, Inc. All other brand and product names are trademarks of their respective owners.



FLIR Systems Ltd. 2 Kings Hill Avenue Kings Hill West Malling Kent, ME19 4AO

United Kingdom Tel.: +44 (0)1732 221 245 Fax: +44 (0)1732 843 707 e-mail: sales@flir.uk.com www.flirthermography.co.uk